

ENJOYLIFE

MASSAGE GUN

MANUAL



20 SPEEDS

Speed	1-4 :	Muscle activation
Speed	5-8 :	Muscle releasing
Speed	9-12:	Lactate decomposition
Speed	13-16:	Professional massage
Speed	17-20:	Deep Relaxation

INSTRUCTIONS FOR USE

LOAD

- Charge the battery for 6 hours before using
- To charge, connect the supplied 24V adapter to the battery port and then plug the cable from the adapter into the wall plug
- The LED band of the battery lights up to show the status of the battery, it also indicates when the battery is charging
- When the battery is connected, the LED lights up
- A full battery is indicated when the LED stops pulsing and lights up continuously
- It is not recommended to drain the battery completely
- The average duration of the battery is 2 hours, depending on the intentions used

USE

- Insert the battery correctly - check if it clicks and is in place
- Switch the device on: set the button at the bottom of the battery to "ON". Turn off by turning this button to "OFF"
- Press the middle button at the back of the device. The device is running.
- The left button is to increase the speed
- The right button is to decrease the speed
- The left numbers mentions the speed, the right numbers mentions the battery level
- DO NOT USE PRESSURE ! damage caused by using too much pressure is not covered by our warrantee
- Use the massage gun on the desired body part, at the desired speed, with no pressure
- Remove the battery: lightly press the button above the battery with your thumb.
Pull the battery down with your other hand

MAINTENANCE AND CLEANING

- Use a damp cloth to clean the device, dry with a dry cloth
- For storage or transport, remove the battery and place the device in its case

DISCLAIMER

ATTENTION

- Do not immerse the device in water. Keep the device away from liquids and hot sources. Keep the ventilation holes free of dust and all sorts
- Do not loosen screws or dismantle the device
- Do not use the device for longer than 1 hour. Let the device rest for 30 minutes before using it again
- Remove the charger from the battery after charging and before use

SAFETY INSTRUCTIONS

ATTENTION: TO AVOID EXPOSURE TO ELECTRIC SHOCK, SHORT-TERM, PERSONAL INJURY, THIS APPLIANCE MUST BE USED ACCORDING TO THE FOLLOWING INSTRUCTIONS.

- Only for adult use
- Only use the device on a dry part of the body, above clothing, pressing lightly and moving over the body part for 60 seconds (per muscle or muscle group)
- Use the EnjoyLife only on soft body parts, without generating pain or uncomfortable feeling. Do not use the device on the head or on hard body parts
- Only use the application that produces the best effect
- Fractures can occur if you use the device incorrectly and with too much pressure. Check the treated body parts and stop immediately if you feel pain or uncomfortable
- Keep your fingers and hair away from the moving parts and the rear of the device
- Do not place anything in the ventilation holes of the Massage Gun
- Do not immerse the device in water, do not drop water on the device
- Do not drop the Massage Gun
- Only charge with the supplied charger
- Check the device before each use and before every charging
- Do not tamper with the device, do not change the device
- Do not leave the device when it is on or charging

DO NOT USE THE ENJOYLIFE MASSAGE PISTOL WITHOUT THE PERMISSION OF YOUR DOCTOR BY THE FOLLOWING SITUATIONS:

Pregnancy, diabetes with neuropathic complications, retinal damage, use of pacemakers, recent surgery, epilepsy or migraine, hernia, spondylolisthesis, spondylol-ysis, spondylosis, recent joint replacement, in the presence of metal fittings, and any nature of health issues. Children must be accompanied by their parents when using any massage gun.

The enumeration of these criteria does not mean that you cannot use the EnjoyLife Massage Gun, but we recommend that you consult your doctor. Research is still ongoing concerning the effects of vibration devices for specific medical purposes. This is likely to lead to a shortening of the above list. Practice and experience has shown that integration of vibration exercises is recommended in many cases. This should be done with advice and in the company of a doctor, specialist or physiotherapist.

GUARANTEE

IF THE DEVICE FAILS WITHIN THE FIRST YEAR YOUR DEVICE WILL BE REPLACED FOR REPAIRED FOR FREE. BATTERIES HAVE 3 MONTHS WARRANTY

This warranty excludes:

- Damage as a result of an accident, abuse, incorrect use, transport
- Goods subject to unauthorized repair
- Goods that have not been used in accordance with the guidelines (eg using too much pressure)
- Damage that exceeds the value of the product
- Deterioration of the device due to incorrect storage and / or security instructions at the customer
- If the proof of purchase cannot be presented
- Battery has warrantee of 3 months

The guarantee guarantees legal rights, some rights may vary from country to country. The warranty is available according to the warranty procedures of international distributors.